

PROCEDURE FOR INSTALLATION OF CLEAR ACRYLIC MIRR.EDGE® Onto MIRRORS WITH CONCEALED FASTENER CLIPS



1

Installation with Clips Secured Behind the Mirror



2

Install Vertical Mirr.Edge Strips. Place Horizontal Bottom Strip Above Clips and Mark Center Locations.



3

Transfer Center Marks to Rear of Mirr.Edge Strip



4

With Drill Machine and Tapered Rotary Rasp, Start a Gouge in the Mirr.Edge Strip to Accommodate the Clips



5

Repeat for Second Clip




6

Install Finished Mirr.Edge Strip onto Mirror



7

Fashion Clip Covers from Excess Material

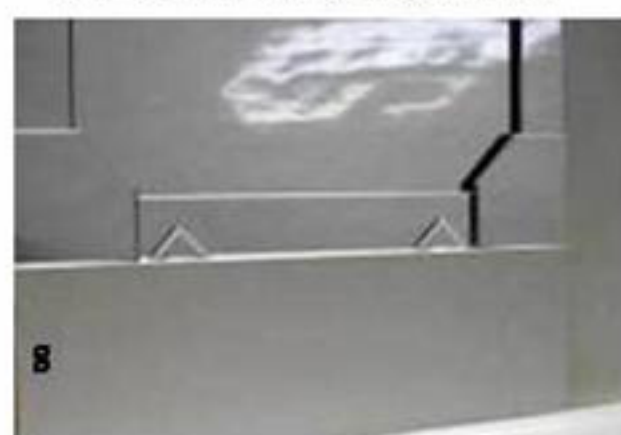

8

Complete Installation with Application of Corner Plates